

BMW Easy Access Seats

Components



Module

 


POWER / CAN Cable

Version Information

Model Name	BMW Easy Access
Latest Firmware Date	2014 - 05 - 08
Manual Version	Rev. 1.0
Manual Release Date	2014 - 05 - 08

Dip Switch Settings



No.1	No.2	No.3	No.4	No.5	No.6	Car Models
OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	1, 3, 4 Series(F20, F30, F32)
ON(▼)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	5 Series(F10) *6-Pin LVDS(2013+)
OFF(▲)	ON(▼)	OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	5 Series(F10) *4-Pin LVDS(-2012)

Easy Access 'ON-OFF' Settings




Button	Operation
Push to the Left(<)	Push the dial to the left 5 times, quickly.

Save the seat position



Button	Function
Memory No.2(Ⓐ)	Save a comfortable position of the seat, when you get out of the car.
Memory No.1(Ⓑ)	Save a comfortable position of the seat, when you get in the car.
Driver's seat is moved between position No.1 and position No.2 automatically, when you turn on or turn off the ignition.	

Connector Specification

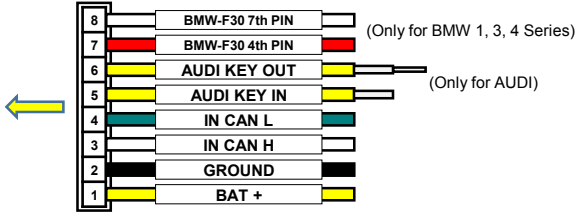

Installation Manual


BMW Easy Access Seats

5 Series(F10) **2013+**(6-Pin LVDS)






1) Remove the glovebox under cover.

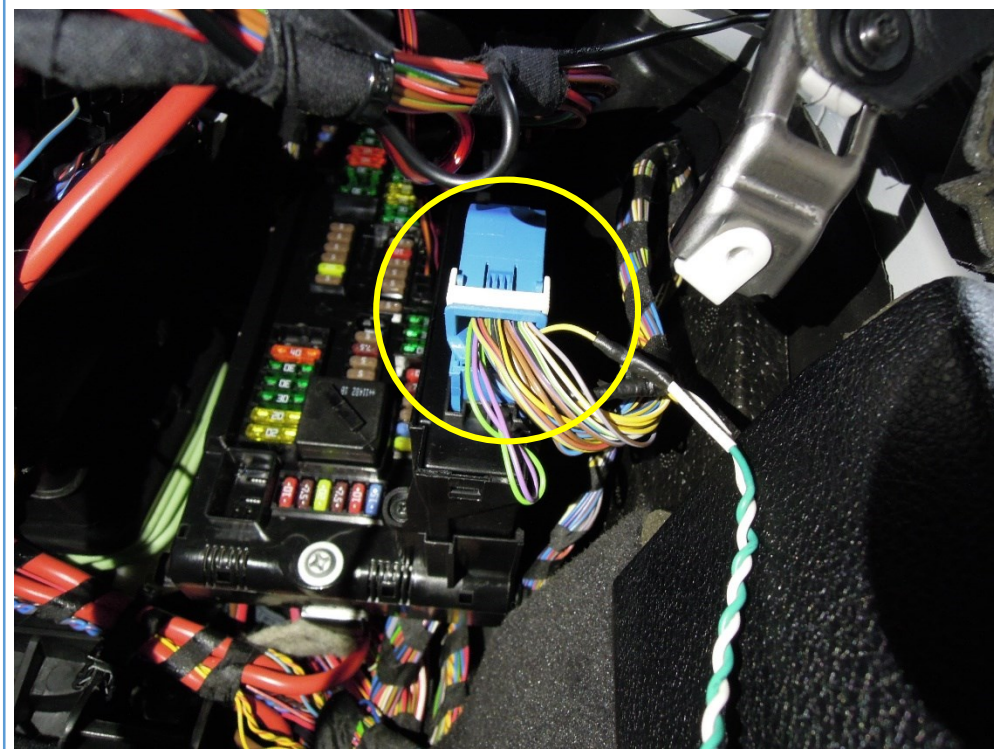


2) Unplug the '54-pin connector(Light Blue)' of fuse box.

※ CAUTION ※



You have to unplug the connector after turn off the ignition.

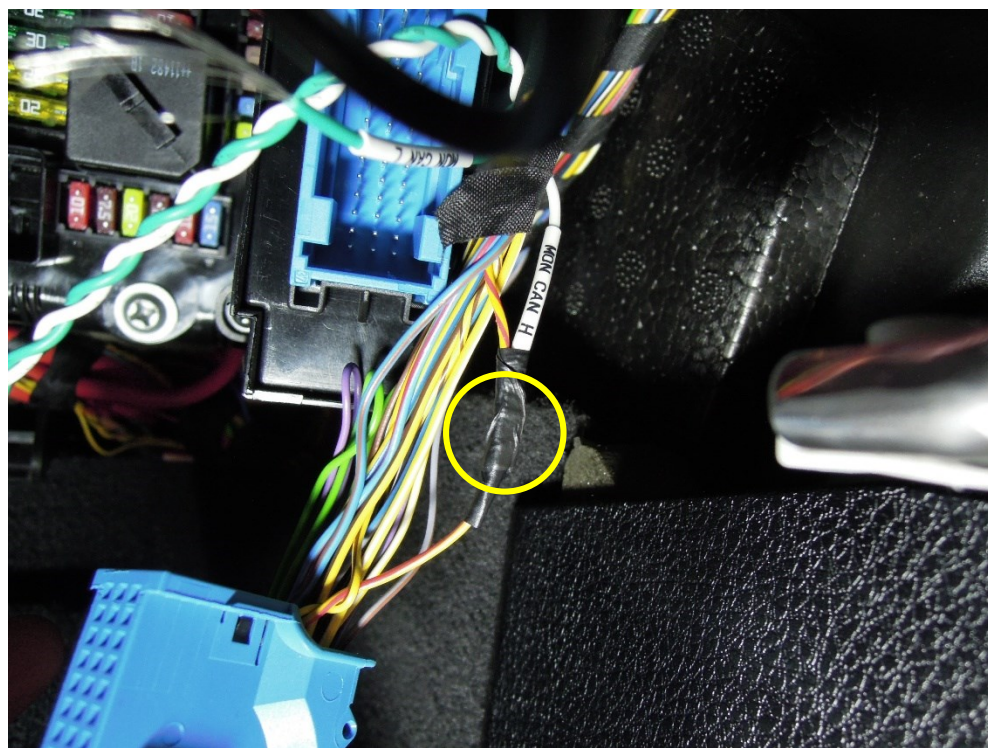


3) Splice the 'IN CAN H(No.3 / White) wire' to 'No.1 wire(Yellow/Red)' of the 54-pin connector.
< CAN HIGH connection >

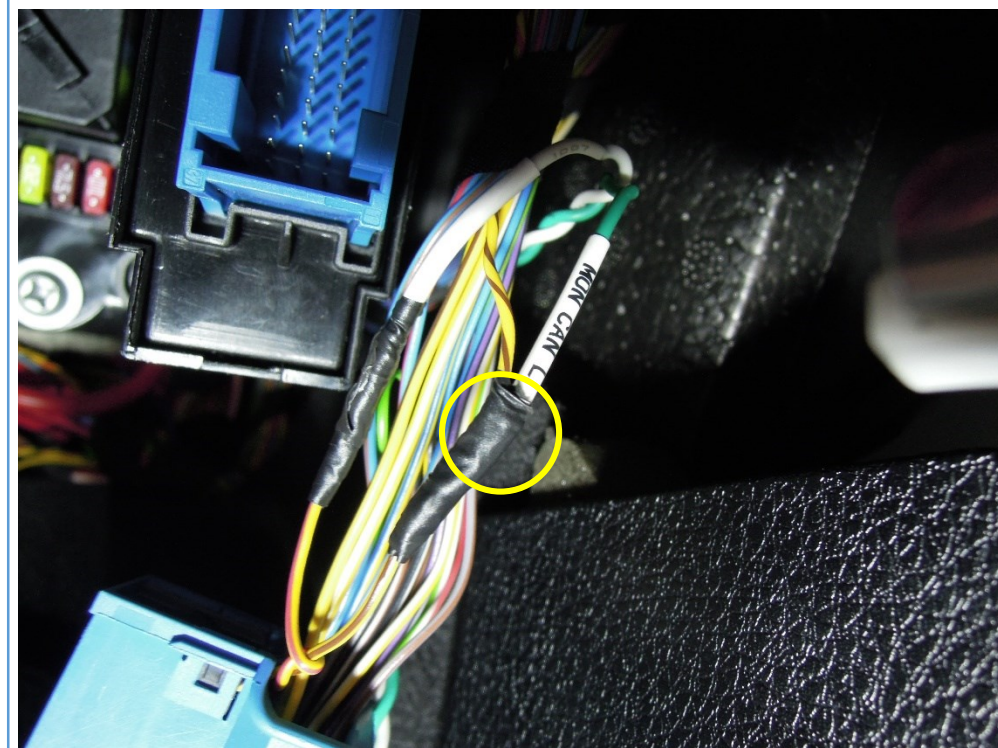


4) Splice the 'IN CAN L(No.4 / Green) wire' to 'No.2 wire(Yellow/Brown)' of the 54-pin connector.
< CAN LOW connection >

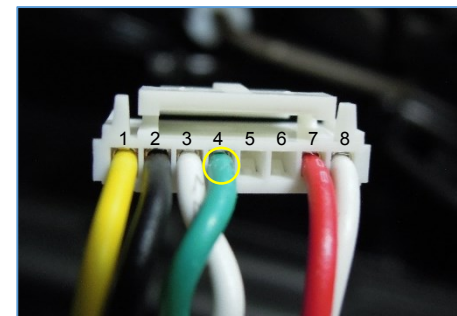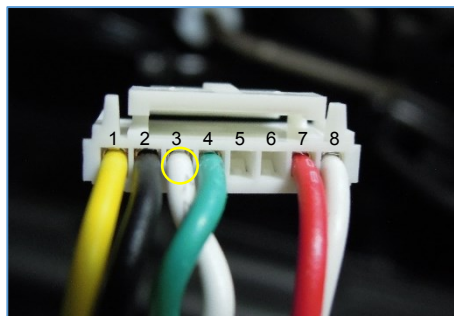


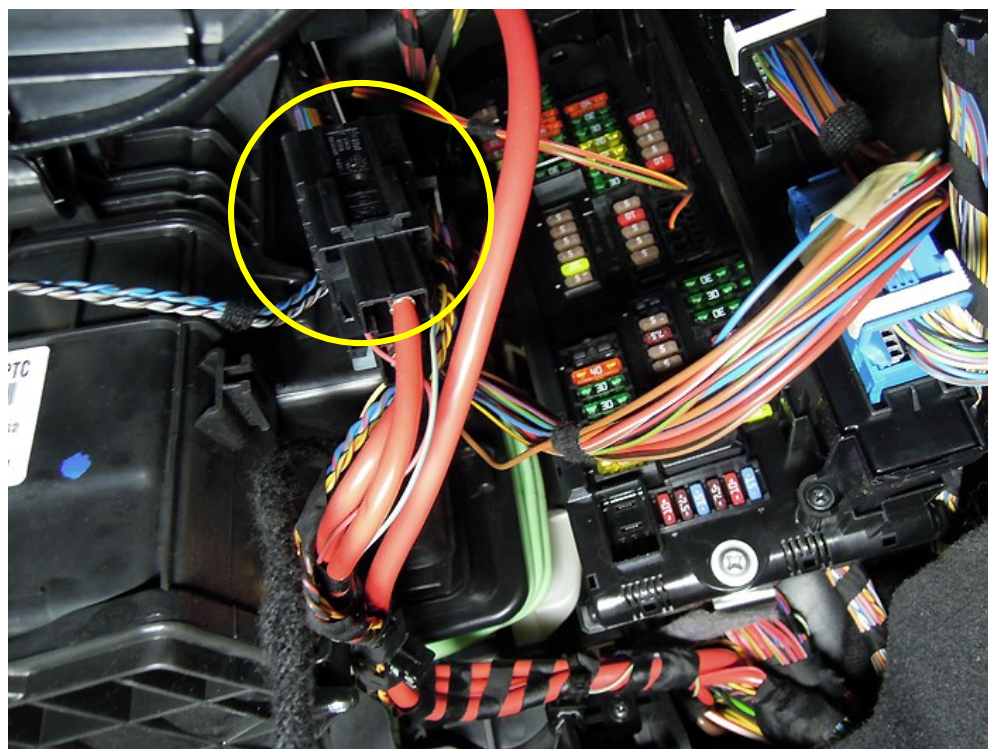


5) Remove the relay in front of fuse box.
(Rotate it counterclockwise.)

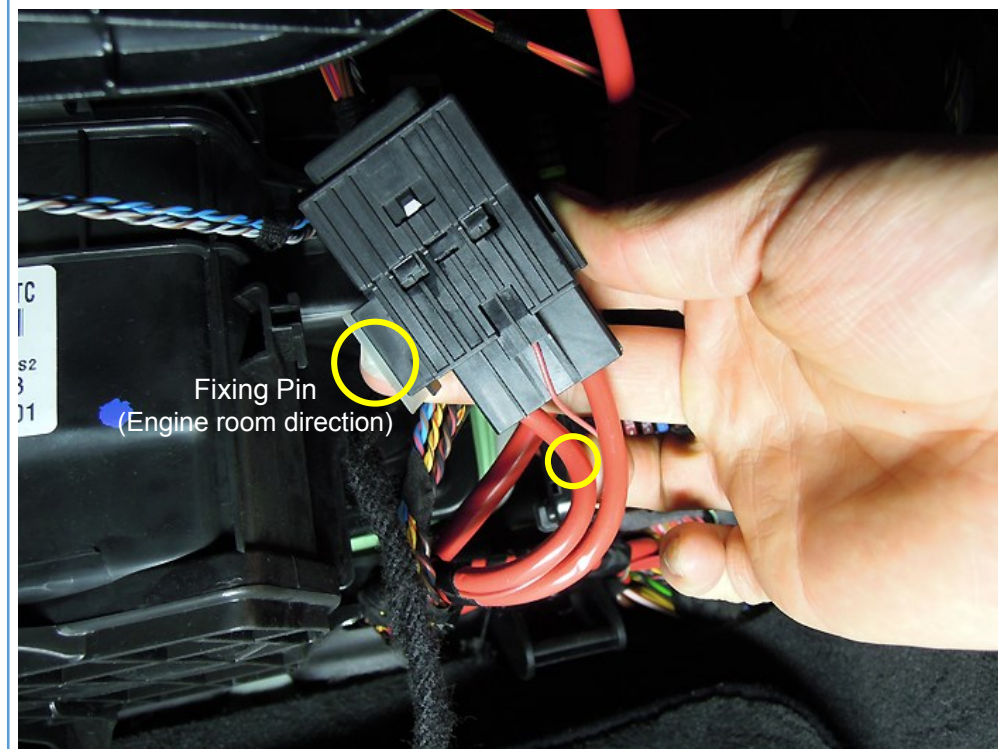

6) Splice the 'BAT+(No.1 / Yellow) wire' to
'Red wire in the direction of the engine room(Battery power)'.
< No.2(GROUND)wire should be connected with ground of the car.>

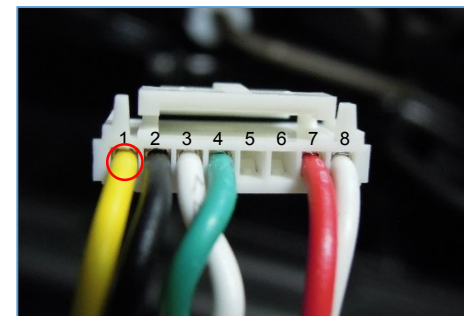

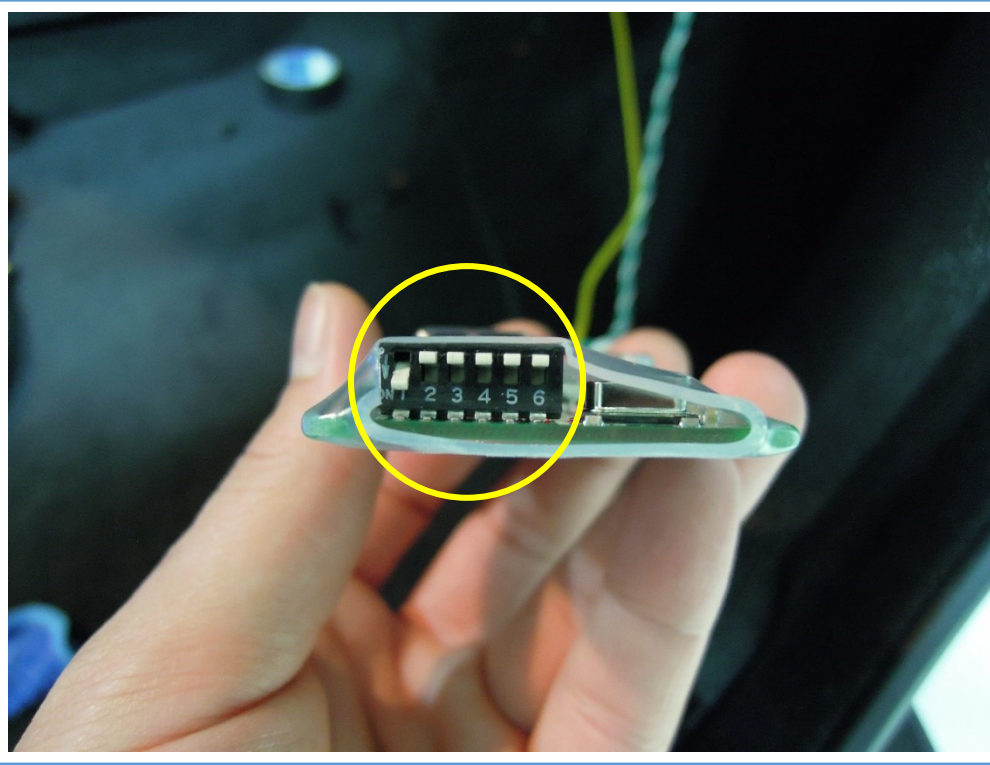

7) Set the DIP switch for BMW 5 Series(F10 / 6-Pin LVDS).



8) Driver's seat is moved to the memory position No.1(Ⓐ) automatically, when you turn on the ignition.

The seat is moved back to the memory position No.2(Ⓑ), when you turn off the ignition.