



QR CODE

How To Removal Screen,Radio



IW-N-NR Instruction Manual

Model Name	IW-N-NR
Latest Firmware Date	2017 - 07 - 03
Manual Version	Rev.1.2
Release Date	2017 - 07 - 24

INDIWORK
INDIVIDUAL WORKSHOP


DIP Switch Settings



PIN	ON(▼)	OFF(▲)
1	OMNI VIEW CAMERA	Skip OMNI VIEW CAMERA
2	AV1 External Front View	Skip AV1 External Front View
3	Selection of car model	
4		
5		
6		

Hazard Module Connection

※ Support only "N-LINK II"

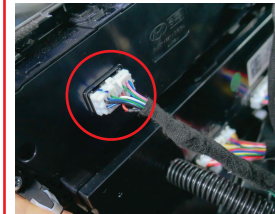


Pin # 13 = Red

OmniView switch



Pin # 3 = Button data

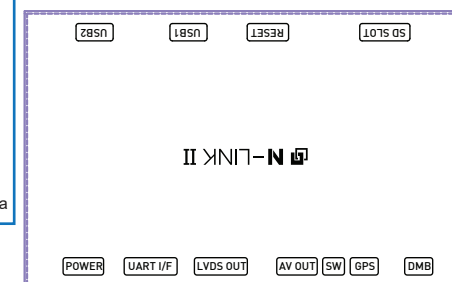


II N-LINK

If using GPS FAKRA Cable
N-LINK II and A-LINK
"No.2 OFF"



Activation by original buttons

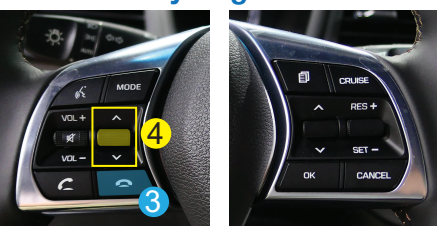


1 HOME	Change Mode (NAVI)	Press the button 2 seconds long
2 SETUP	Change Mode (AV1)	Press the button 2 seconds long
2 SETUP	Enter into the setting menu	Press the button 5 seconds long
3 End call	Reset	Press the button 10 seconds long

Omni View(Around View camera)

3 End call	Change mode	In case of shift gear reverse Order: OEM → Omniview
4 Dial Button	Omni View Change mode	Short press on the dial button (It need to wire OMNI Key)


Control of navigation functions with buttons (Only N-LINK)

4	N-LINK II Previous song Next song	Rotate the dial button. DMB : Change to next or previous MOVIE : Change to next or previous MUSIC : Change to next or previous
---	---	---

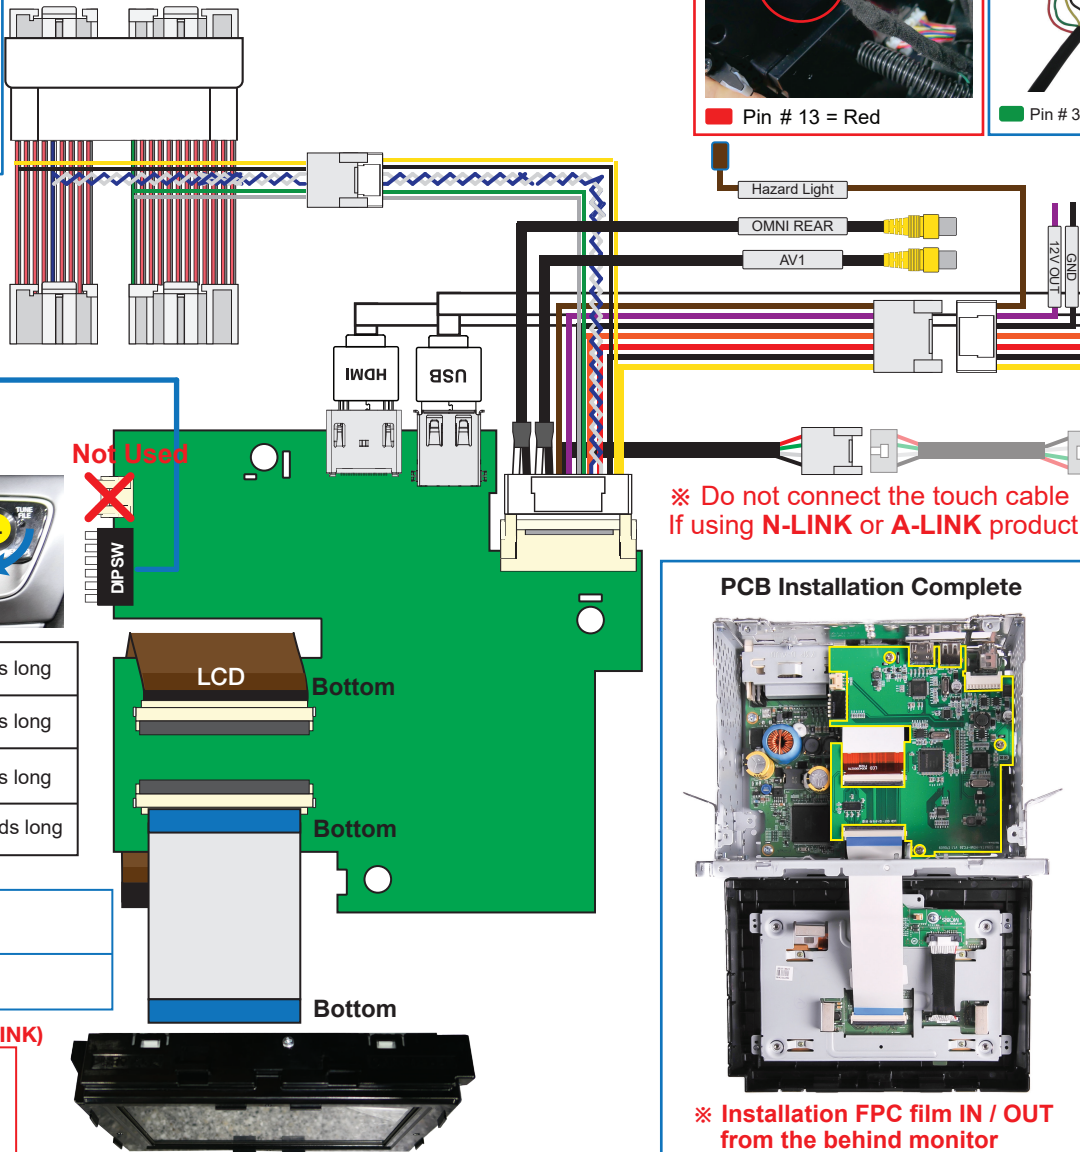


※ Do not connect the touch cable
If using N-LINK or A-LINK product.

PCB Installation Complete

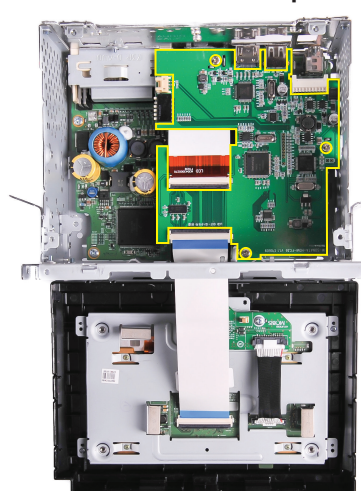

※ Installation FPC film IN / OUT
from the behind monitor

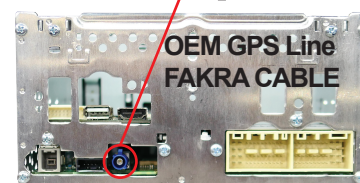

IW-H-NR Components

