


# R04-MB14 Rear View Camera Interface

## Components

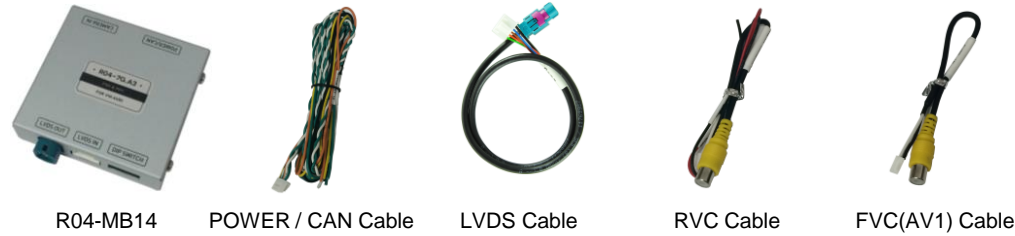

## Version Information

Model Name	R04-MB14
Latest Firmware Date	2017 - 09 - 11
Manual Version	Rev. 3.7
Manual Release Date	2017 - 10 - 17

Manufactured by  
**MICROCITY**

Distributed by  
**INDIWORK**  
INDIVIDUAL WORKSHOP

## Dip Switch Settings




No.3	No.4	No.5	No.6	Car models
OFF(▲)	OFF(▲)	OFF(▲)	OFF(▲)	C-Class / 8.4-inch
OFF(▲)	OFF(▲)	ON(▼)	ON(▼)	C, V / 7-inch
OFF(▲)	ON(▼)	OFF(▲)	ON(▼)	E, CLS / 7, 8-inch
OFF(▲)	ON(▼)	ON(▼)	ON(▼)	B, CLA / 8-inch
ON(▼)	OFF(▲)	OFF(▲)	OFF(▲)	B, CLA / 7-inch
OFF(▲)	ON(▼)	OFF(▲)	OFF(▲)	V-Class / 8.4-inch

## Setting mode



Button	Function
★ (Bookmark)	Enter into the setting menu. (Press the button 5 seconds)
Select (●)	Select the setting menu and setting values.
BACK	Back to previous menu.
Dial (▲, ▼, ◀, ▶)	Move the menu-pointer and adjust the setting values
BACK (Steering wheel)	Change the mode to FVC(AV1), when press the button 2 seconds.

## Setting mode

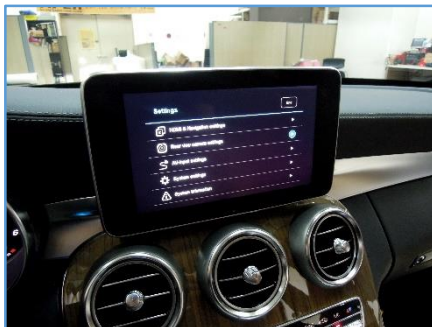

① Enter into the setting mode.



② Adjust guide lines position and ON / OFF



③ Adjust PDC sensors position and ON / OFF





④ Adjust values of brightness and contrast.

# R04-MB14 Rear View Camera Interface

## Installation Diagram



COMAND NTG 5.0 Main Connector - CAN wires Inform

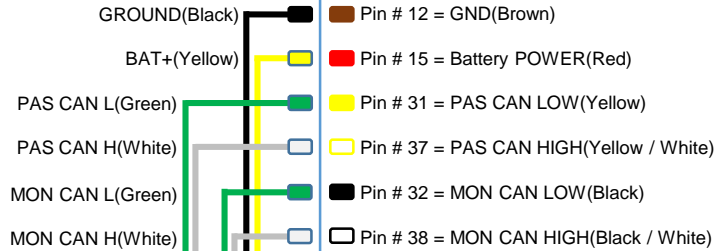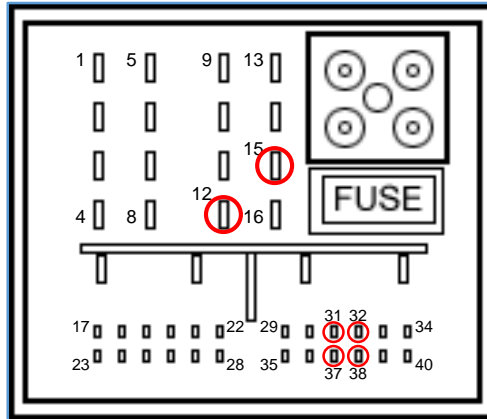

\*The wires color might be different depends on models.  
You have to splice the CAN wires with each pins exactly.

\*OEM CAN wires(High, Low) are twisted each other.

REVERSE 12V IN(Orange) ✘  
(\*Not necessary)

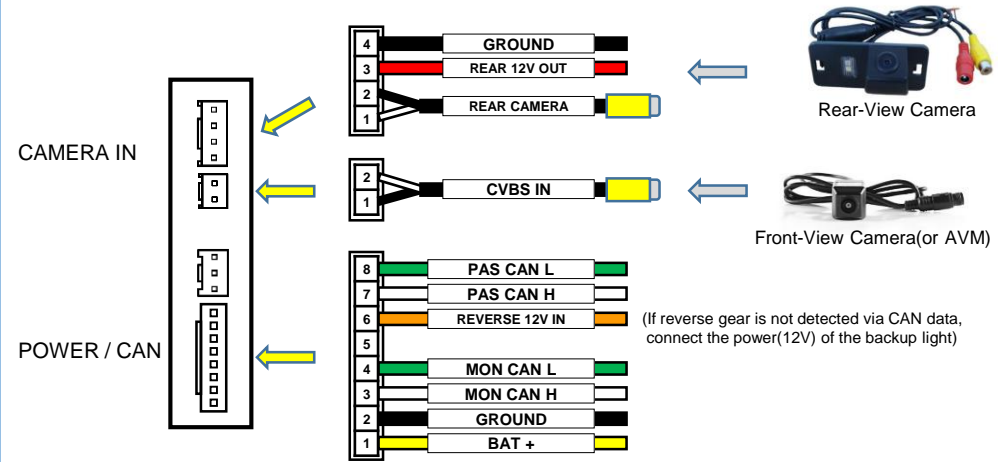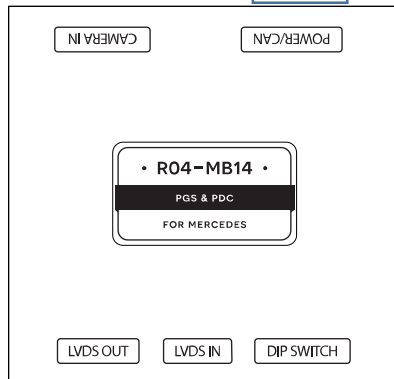

※ OEM LVDS connector should be connected to 'LVDS OUT' port.

Provided LVDS connector should be connected to 'DISP port' of Head unit instead to OEM connector.

