QR CODE

How To Removal Screen,Radio

HD-LINK
IW-H-NR Instruction Manual

Model Name	IW-H-NR
Latest Firmware Date	2017 - 07 - 26
Manual Version	Rev.1.1
Release Date	2017 - 08 - 03

INDIWORK
INDIVIDUAL WORKSHOP

DIP Switch Settings

OFF
ON ON 1 2 3 4 5 6

ON : ▼ OFF : ▲

PIN	ON(▼)	OFF(▲)
1	OMNI VIEW CAMERA	Skip OMNI VIEW CAMERA
2	AV1 External Front View	Skip AV1 External Front View
3	Selection of car model	
4		
5		
6		

Activation by original buttons

1 HOME	Change Mode (NAVI)	Press the button 2 seconds long
2 SETUP	Change Mode (AV1)	Press the button 2 seconds long
2 SETUP	Enter into the setting menu	Press the button 5 seconds long
3 End call	Reset	Press the button 10 seconds long

Omni View(Around View camera)

3 End call	Change mode	In case of shift gear reverse Order: OEM → Omniview
4 Dial Button	Omni View Change mode	Short press on the dial button (It need to wire OMNI Key)

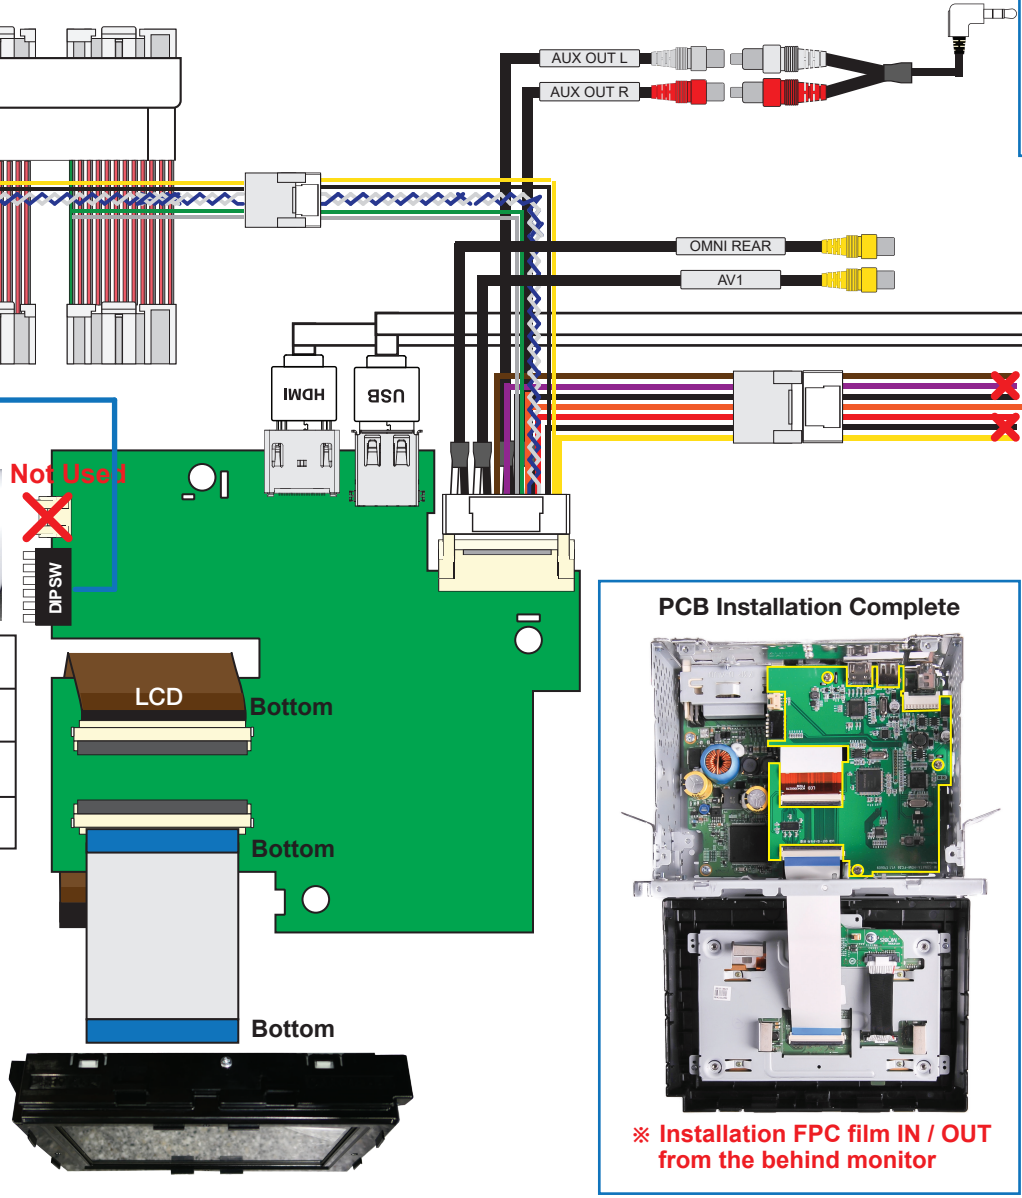

Connect to AUX Cable in the car aux port

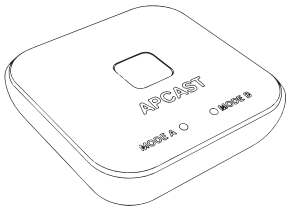

HDMI DEVICE

OmniView switch

Pin # 3 = Button data

PCB Installation Complete

※ Installation FPC film IN / OUT from the behind monitor

IW-H-NR Components

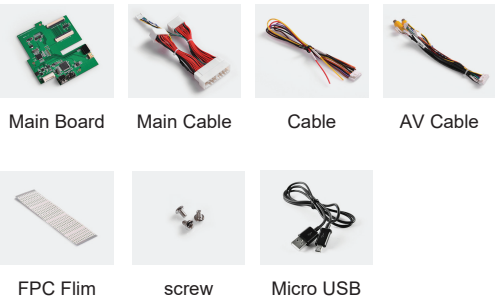

Main Board | Main Cable | Cable | AV Cable

FPC Flim | screw | Micro USB