WK-30BI

딥 스위치 설정
OFF / ON1 2 3 4 5 / ON : ↓ / OFF : ↑

No.1	No.2	No.3	No.4	No.5	Car Model	Car Model
OFF(▲)	ON (▼)	ON (▼)	ON (▼)	ON (▼)	NTG4.5	2012-2018 A (W176) 2010-2014 C (W204) 2009-2015 E (W212) 2009-2015 GLK (X204) 2012-2014 ML (W166)
ON (▼)	OFF(▲)	ON (▼)	ON (▼)	ON (▼)	NTG5.0	2015 C-Class(W205)
ON (▼)	OFF(▲)	ON (▼)	OFF(▲)	OFF(▲)	NTG5.5	2017- W213

WK-30BI
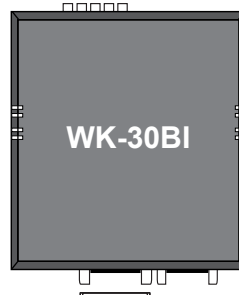
Mercedes W212 Door — **Door Module Control Unit**

(RED) **Power B+** =
(Brown) **Ground** =

Removal the OEM Terminal

CAN1 L / CAN1 H / CAN2 L / CAN2 H
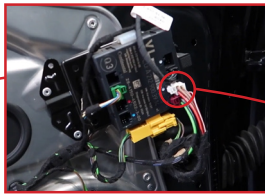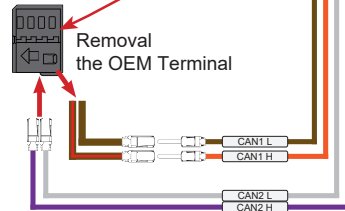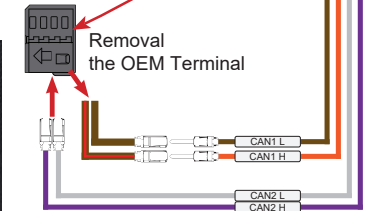
동작 방법

Easy Access

Button	Operation
1 Driving Position	1번에 운전할때 시트위치를 메모리합니다. **Save to switch #1** Save a comfortable position of the seat, when you get in the car.
3 The Seat Moving Backward Position	3번에 차에서 하차시 시트위치를 메모리합니다. **Save to switch #3** Save a comfortable position of the seat, when you get out of the car.

※**Memory 1, 2, 3 must be set unconditionally for the first time after installation.**
　(최초설치시 꼭 1,2,3 메모리를 다시 설정해야합니다)

Walk-IN

Button	Operation
3 Passenger Seat Control	3번스위치를눌러 워크인모드진입후 시트위치조정 스위치로 조수석 시트를 제어합니다 **After entering walk-in mode by pressing switch 3,** control the passenger seat with the seat position adjustment switch.

※**Seat When there is no input "more than 5seconds" Disabled walk-in mode**
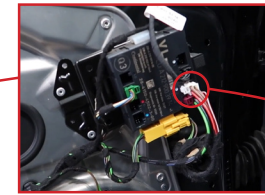　("5초 이상" 입력이 없을 때 워크인 모드 비활성화)