


Model Name	2019 ES300h
Latest Firmware date	2019 - 06 - 03
Manual Version	Rev. 1.8
Release Date	2019 - 09 - 06

DIP Switch Settings



핀 번호	ON(▼)	OFF(▲)
1	HDMI Mode	Skip HDMI Mode
2	Navigation Mode	Skip Navigation Mode
3	External Rear View Camera	Original Rear View Mode (OEM CAMERA)
4	External Front View Camera(AV1 Mode)	Skip External Front View Camera(AV1 Mode)
5	AV2(DVBT) Mode	Skip AV2(DVBT) Mode
6	Not Used (default OFF)	
7	Select car model	
8		
9		
10		


No.7	No.8	No.9	No.10	Car Model
OFF: ▲	OFF: ▲	OFF: ▲	OFF: ▲	2019 ~ ES300h 2019 ~ NX300h
OFF: ▲	OFF: ▲	OFF: ▲	ON: ▼	2019~ UX 7inch

Activation by
original buttons




Lexus UX 7inch

Please cutting the wire.
If not cutting. The interface screen will be blinked

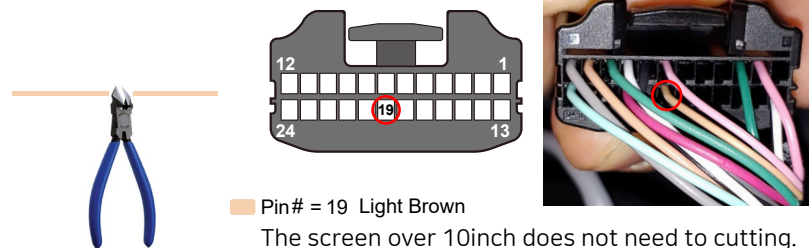


Head Unit Main Connector

※ The OEM wire color may different. Please. checking with PIN number

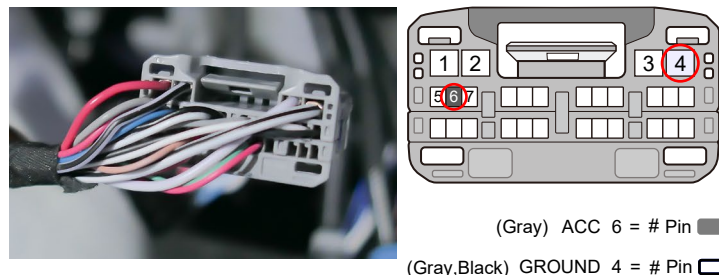


Head Unit Main Connector

※ The OEM wire color may different. Please. checking with PIN number

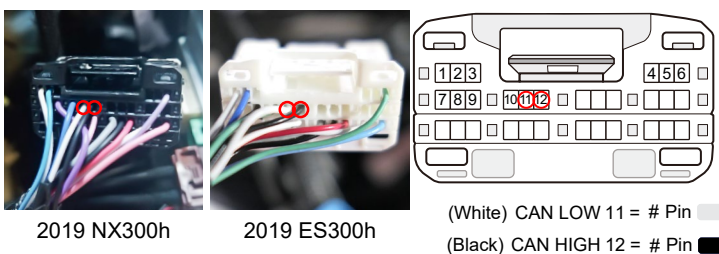


Buttons	Function	Operation	Remarks
1 MAP	Changing Modes	Press the button 2 seconds long.	Order : OEM → HDMI → NAVI → NAVI
2 BACK	Changing Modes	Press the button 2 seconds long.	Order : OEM,HDMI ,NAVI → NAVI
3 ▲ Button	Changing screen ratio	Press the button 2 seconds long.	Fit Size & Full Size

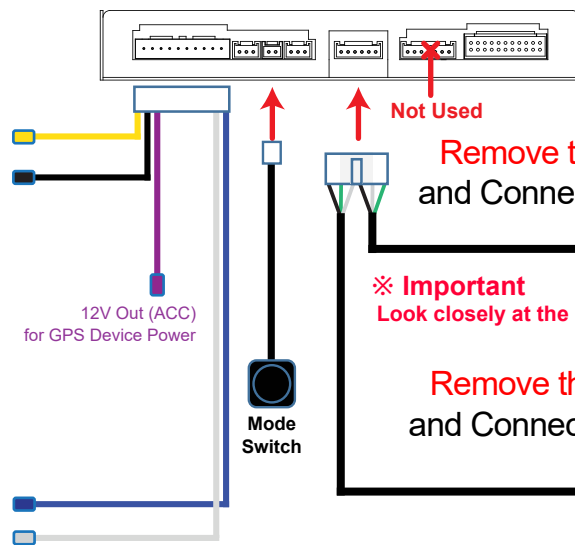

Monitor Main Connector

Please cutting the wire. for installation Around view camera
If not cutting. The interface can not change screen to "External rear camera,AV1"

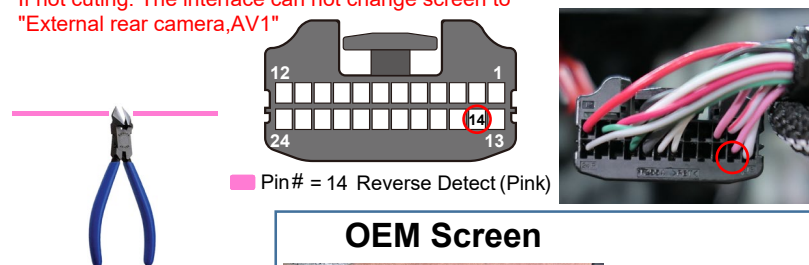

OEM Screen



Remove the OEM GVIF cable
and Connect Provied GVIF cable

※ Important
Look closely at the cable for correct IN / OUT

Remove the OEM GVIF cable
and Connect Provied GVIF cable

OEM Head Unit

